





Easi-View

Door Mounted
Security Window

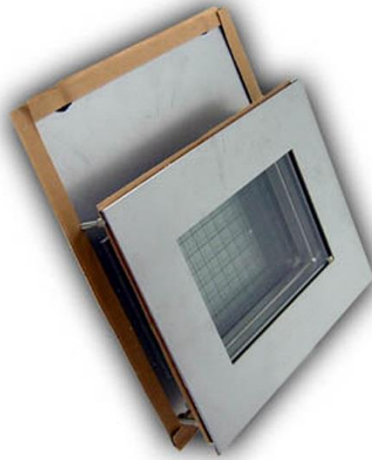


Installation Instructions

Easi-Serv
302-6741 Cariboo Road
Burnaby, BC
Canada V3N 4A3
Telephone: 1.604.422.8611
Toll Free in North America: 1.888.591.0106
Fax: 1.604.422.8376
E-mail: service@easi-serv.com
Web: www.easi-serv.com

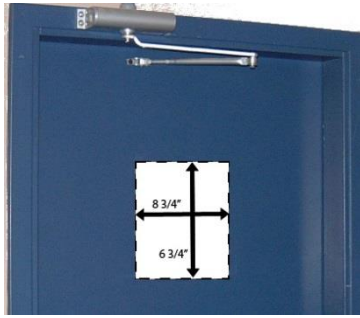

1. Cut an 8 3/4" wide x 6 3/4" high hole in the door. The bottom of the hole should be approximately 58" from the bottom of the door.

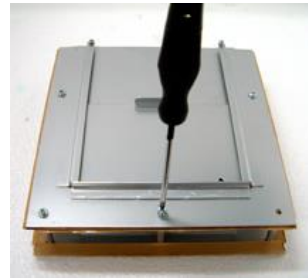


2. Remove the five screws which hold the two halves of the window together.



3. Disassemble the window to prepare for tape backing removal and installation to the door. The portion with the five screw holes is the interior piece and the alternate one is the exterior piece.



4. Remove the paper from the glazing tape on the exterior portion of the window. Using care to align the window in a level and plum position, press it into the door opening. The tape will hold the exterior portion in position while you place the interior part in position.

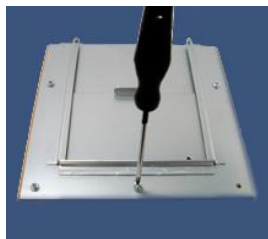

5. Remove the paper from the glazing tape on the interior portion of the window. Place the interior piece into position in the door opening. Tightly secure the five screws; pre-drilling may be required.



6. Use a utility knife to trim away any glazing tape that has squeezed out. The tape will ensure the waterproofing of the window.